


Keyhole Bits

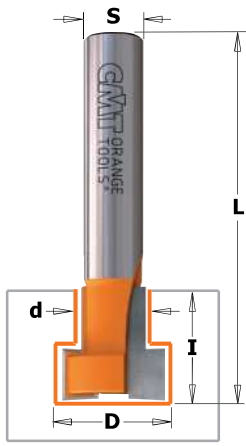


7/8/950.0_5

With the CMT keyhole bit you can make holes that keep your frames, plaques or any wall hanging perfectly straight and attached to the wall. The perfect way to securely mount wall hangings on screws and nails. Three new bits available to create slots for M5, M6, M8, M10, M12 hexagonal head bolt for removable joints.

SAFETY TIPS: Be sure the workpiece is securely fastened to the router table or work bench.


SHOP TIPS: Recommended for use with a plunge router.

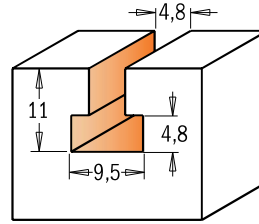


Drawing is 1:1 scale



890.501.21

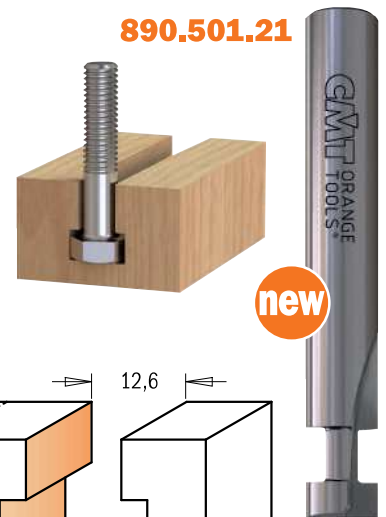

new

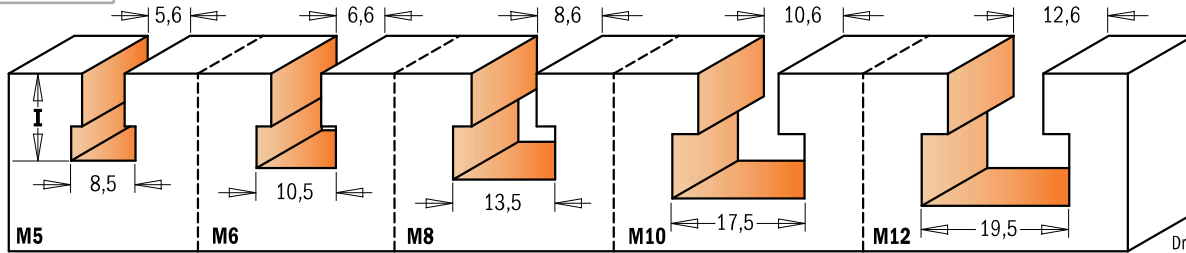


Drawing is 1:1 scale


D mm	d mm	I mm	L mm	Z		ORDER NO. S=Ø6mm	ORDER NO. S=Ø6,35mm	ORDER NO. S=Ø8mm	ORDER NO. S=Ø9,5mm	ORDER NO. S=Ø12mm	ORDER NO. S=Ø12,7mm
9,5	4,8	11	54	1		750.001.11	850.001.11	950.001.11		950.501.11	850.501.11
• 9,5	4,76	11	65	2					850.501.21		
8,5	5,6	11,5	48	1	M5	10		950.002.11			
10,5	6,6	12,5	48	1	M6	10		950.003.11			
13,5	8,6	14	48	2	M8	10		950.004.11			
new 17,5	10,6	16,5	48	2	M10	10		950.005.11			
new 19,5	12,6	17,5	48	2	M12	10		950.006.11			

• HWM

T-Slot Bits

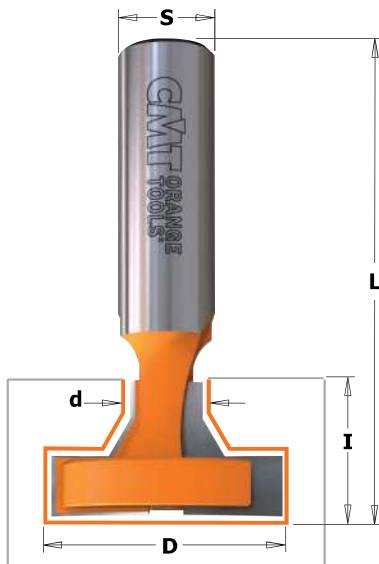


8/950.1_6

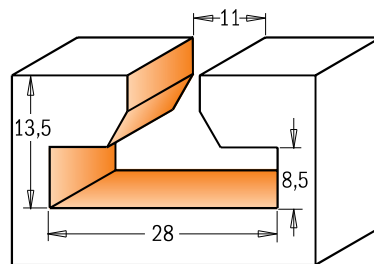


8/950.103 - 603


Drawing is 1:1 scale

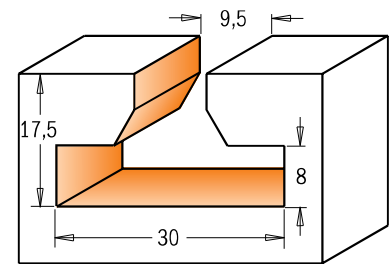

8/950.101 - 601

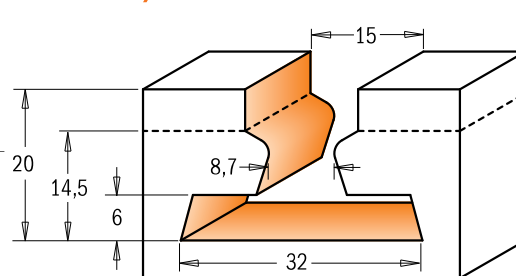

950.604

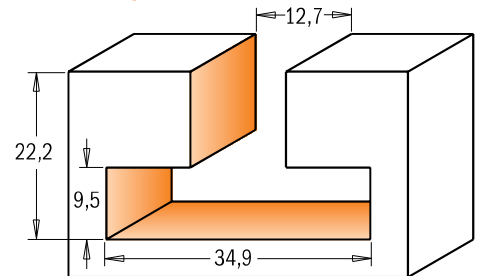

8/950.602

D mm	d mm	I mm	L mm	Z		ORDER NO. S=Ø8mm	ORDER NO. S=Ø12mm	ORDER NO. S=Ø12,7mm
new 28	11	13,5	47,6	2	10	950.103.11		
28	11	13,5	56,3	2	10		950.603.11	850.603.11
new 30	9,5	17,5	50,8	2	10	950.101.11		
30	9,5	17,5	60,3	2	10		950.601.11	850.601.11
32	8,7-15	20	66	1+1	10		950.604.11	
34,9	12,7	22,2	63,5	2	10		950.602.11	850.602.11